TOTO

施工说明书 Instructions for construction

安装产品前请仔细阅读本施工说明书,并保留备用。 Before product installation, read these instructions for construction carefully and retain it for future reference.

TOTO



明细单

目 录

目	录1
明组	日单······2−3
使用	月条件与施工上的注意·····4
施工	上的注意与保养······5
安装	是完成图6
水嘴	觜的安装⋯⋯⋯⋯⋯⋯7−11
生产	· 厂家与销售商······12

明细单

埋墙本体部•••••1套	
吐水本体部······1套	
手柄部······1套	
固定接手······1套	
装饰盖(大孔)1个	
装饰盖(小孔)1个	
螺钉2个	
吐水口治具1个	
防水布2个	
施工说明书1本	
使用说明书1本	

明细单

使用此明细单的产品包括:

TLG01310* 铜合金壁式单柄双控暗装洗面器水嘴 TLG01311* 铜合金壁式单柄双控暗装洗面器水嘴 TLG02310* 铜合金壁式单柄双控暗装洗面器水嘴 TLG02311* 铜合金壁式单柄双控暗装洗面器水嘴 TLG03308* 铜合金壁式单柄双控暗装洗面器水嘴 TLG04309* 铜合金壁式单柄双控暗装洗面器水嘴 TLG04310* 铜合金壁式单柄双控暗装洗面器水嘴

使用条件与施工上的注意

使 用 条 件

1. 供冷水*热水压力:

最低压强·······0.05MPa(流动压)

最高压强·······1.0MPa (静压)

推荐使用压强······0. 1-0. 5MPa(流动压)

检测压强······1.6MPa (静压)

- 2. 供水温度在4℃~90℃,建议使用热水温度60℃,供热水请勿使用蒸汽。
- 3. 使用环境温度0℃以上。如果低于0℃,水嘴会出现变形、冻裂等现象。
- 4. 长时间不使用时,可能导致水嘴内部及外部锈蚀不能使用等现象。
- 5. 如果您需要废弃本产品,请勿将其作为一般生活垃圾处理,请依照法规经由独立的回收体系进行合适的处理、恢复和回收。
- 6. 本说明书中的产品具有清洗功能。

施工上的注意

⚠ 警告 表示如果无视此标志而误操作时,有可能造成人员重伤或死亡。

介 注意 表示如果无视此标志而误操作时,有可能造成人身伤害或财产损伤。

⚠警告

- 1. 水嘴的供热水一侧处于高温状态,请勿使皮肤直接接触五金配件表面, 否则可能会烫伤。
- 2. 请勿配反冷*热水配管, 否则可能会烫伤。
- 3. 供热水请勿使用蒸汽, 否则可能会烫伤。

施工上的注意与保养

⚠注意

- 1. 由于陶瓷阀芯是较精密的部件,请勿擅自分解,否则可能会造成漏水等不良。
- 2. 请勿撞击本产品,否则可能会造成故障、漏水。
- 3.随着产品式样的不断更新,实物存在与图示不符的情况,但基本安装、 使用原理相同。
- 4. 由于出厂前进行通水检查,故水嘴内可能有残留水,并非产品有问题。
- 5. 在可能结冰的场所使用时,要切实做好防冻措施。 因结冰,零件破损,有可能导致漏水,造成财产损失。因结冰而造成的 破损即使在保修期内也是有偿修理。请不要让产品的环境温度低于0°C。

防冻措施

在可能结冰的场所使用时,要切实做好防冻措施。


- 1. 产品结冰的话零件损坏,成为漏水的原因。
- 2. 因结冰造成的零件破损即使在保修期也是有偿修理。
- 3. 施工完了后或长时间不使用时,要有预防突然降温的准备,要对产品进行结冰预防。
- 4. 因为有结冰的危险,请不要让产品周围的温度在0°C以下。

保养

为长期保持产品的美观,请用户按以下方法维护保养。


- 1. 经常用软布擦拭,间或用软布蘸水擦拭。
- 2. 当有污垢且比较明显时,请用中性洗涤剂擦拭后充分进行水洗。

安装完成图

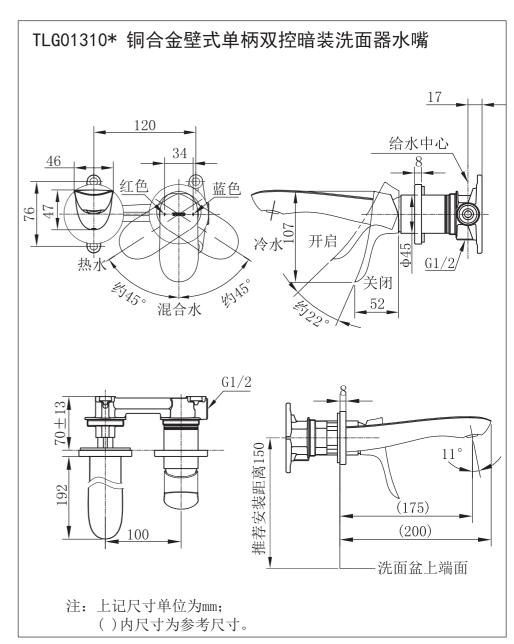

水嘴的安装

安装前准备的工具

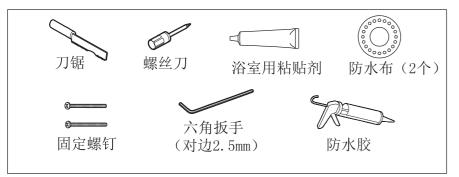


安装前确认


- ■确认供水管已经关闭,确认安装前水路进行清洗了。
- ■仔细阅读施工说明书并按照说明书的安装要领来进行安装。

一、水嘴主体的安装

- 1. 事先把水嘴主体和相应的管子连接好,然后参照图示尺寸在墙面开槽,否则水嘴安装时可能会出现问题。
- ※必要:安装时使用水平仪对埋墙本体进行校正,使水平、垂直在最 佳状态。

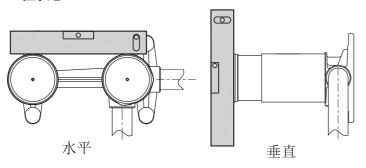


水嘴的安装

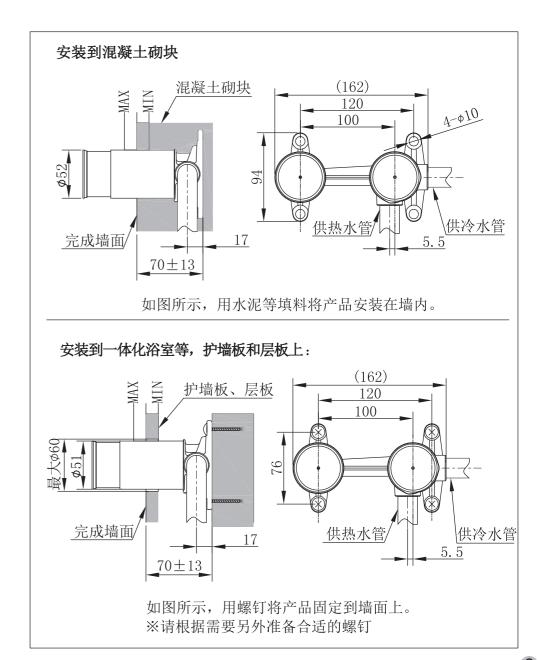

水嘴的安装


注 意

- ●安装埋墙本体时,请不要将树脂套、 内套取下。
- ●安装时,请注意埋墙本体的埋入深度, 请保证完成墙面在保护套上MIN-MAX 标志之间。
- ●讲水管与埋墙本体连接并确认各连接 处不漏水再加水泥填料。

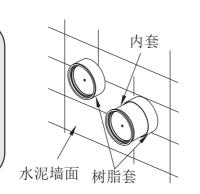


防水布

2. 将防水布穿过树脂套, 使用浴室 用粘贴剂将其粘在水泥墙面上。

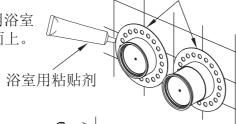

3. 粘贴剂完全干燥之后, 再将瓷 砖安装完毕(瓷砖开孔尺寸见 下图)。在树脂套与瓷砖的缝 隙中均匀涂上防水胶, 且胶面 不能凸出墙面。

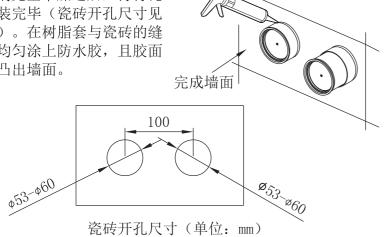


水嘴的安装

二、吐水口部及手柄部的安装


1. 使用刀锯将树脂保护套切除, 需要保证树脂套凸起边缘与墙 面在2mm以内。(边缘也不能凹 陷于墙面以内)

●在切割时注意不要割伤 内套, 以免划伤内部阀 芯套。

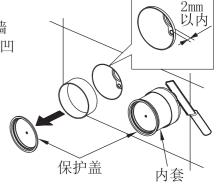

- 2. 手柄部的安装:
 - a. 抽出内套(注:安装完了后内套将不再起作用)。
 - b. 将装饰盖套在阀芯套上, 贴近墙面即可。(注: 为方便安装 可将装饰盖内的0型圈涂少量的肥皂水进行润滑)


c. 手柄安装到阀芯上, 并用螺钉将其固定, 表示盖安装在螺钉孔 位置。

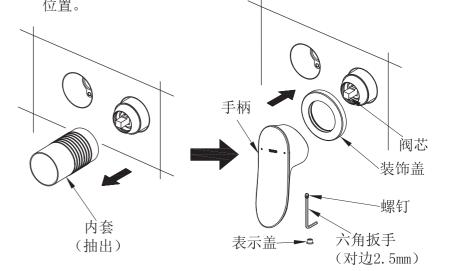


水嘴的安装

3. 吐水口部的安装:

a. 将固定接手插入埋墙本体扣到墙面上 , 并用2个螺 钉将其紧固。

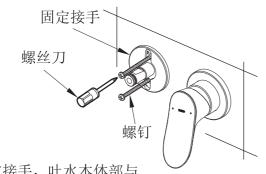

b. 将装饰盖穿过固定接手, 吐水本体部与固定接手连接, 使其与装饰盖完全贴紧, 调整好装饰盖与吐水本体位置后, 将吐水本体用螺钉紧固。

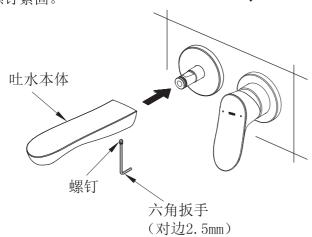

生产厂家与销售商

执行标准: GB 18145-2014、GB 25501-2019

产品型号: 见包装箱上的标签

产品名称: 见包装箱上的标签

生产日期:见包装箱上的标签

组装工厂: 东陶(大连)有限公司

电 话: (0411) 87624383

厂 址:大连经济技术开发区东北二街17号

东陶(中国)有限公司

全国售后服务电话: 800-820-9787(固定电话)

400-820-9787(手机用户)

销售商: 东陶(中国)有限公司

地 址:北京市朝阳区光华路1号北京嘉里中心北楼1915室

网址: www.toto.com.cn

Contents

Contents

Contents ····· 1	
Detailed list 2	2-3
Use condition and attentions in	
construction 4	ŀ
Attentions in construction and	
maintenance 5	5
Installation completion figure 6	}
Faucet installation	'-11

Detailed list

Detailed list

Wall embedded body part ····· 1 set	
Spout body part 1 set	
Handle part ····· 1 set	
Fixed connecter ····· 1 set	
Decoration cover (large hole) 1 piece	
Decoration cover (small hole) 1 piece	
Screw 2 pieces	S
Spout jig 1 piece	
Waterproof cloth · · · · · 2 pieces	S
Installations for construction 1 copy	
Instructions for operation 1 copy	

Detailed list

The products using this detailed list include:

TLG01310* "GO"Wall Mounted Single Lavatory Faucet (Short) TLG01311* "GO"Wall Mounted Single Lavatory Faucet (Long) TLG02310* "GR"Wall Mounted Single Lavatory Faucet (Short) TLG02311* "GR"Wall Mounted Single Lavatory Faucet (Long) TLG03307* "GS"Wall Mounted Single Lavatory Faucet (Short) TLG03308* "GS"Wall Mounted Single Lavatory Faucet (Long) TLG04309* "GA"Wall Mounted Single Lavatory Faucet (Short) TLG04310* "GA"Wall Mounted Single Lavatory Faucet (Long)

Use condition and attentions in construction

Use condition

1. Cold water supply*hot water supply pressure

Minimum pressure 0.05MPa (flow pressure)

Maximum pressure1.0 MPa (static pressure)

Recommended Operating pressure 0.05MPa (flow pressure)

Test pressure 1.0 MPa (static pressure)

- 2. The temperature for water supply is 4~90°C. It is suggested to use the temperature of 60±5°C. Do not use steam to supply hot water.
- 3. The ambient temperature for use is above 0°C. If the ambient temperature is lower than 0°C, the faucet will deform and crack from freezing.
- 4. Being out of use for a long time may result in internal and external rust to the faucet and being unable to be used.
- 5. If you want to scrap this product, do not treat it as you do for general household garbage. Please follow relevant statutes to have it treated, recovered and collected appropriately by an independent recovery system.
- 6. The product in these instructions has a cleaning function.

Attentions in construction

Ŵ Wa

Warning: it means that ignoring this mark and misoperation may cause serious personal injury and death.

1

Attention: it means that ignoring this mark and misoperation may cause personal injury or property loss.

⚠ Warning

- 1. The hot water supply side of the faucets is in a condition of high temperature. Do not allow skin to contact with the hardware surface directly. Otherwise, scalding may occur.
- 2. Do not reverse the cold*hot water pipe. Otherwise, scalding may occur.
- 3. Do not use steam to supply hot water. Otherwise, scalding may occur.

Attentions in construction and maintenance

Attentions

- 1. As the ceramic cartridge is a precise component, do not dismantle it without authorization. Otherwise, such poor conditions as water leakage, etc. may be caused.
- 2. Do not impact the product. Otherwise, failure, water leakage may occur.
- 3. With the product design being updated constantly, the physical object may not coincide with the figure. However, the basic principle for installation, use is the same.
- 4. Due to water supply inspection before ex-factory, there may be water remaining in the faucet. This is not product problem.
- 5. When using in places where icing may occur, anti-freezing measures must be taken. The parts will be damaged due to icing, which may cause water leakage and property loss. Damages caused by icing are repaired for a fee even during the warranty period. Please ensure that the ambient temperature of the product is always above 0°C.

Anti-freezing measures

When using in places where icing may occur, anti-freezing measures must be taken.


- 1. The parts will be damaged due to icing, which may cause water leakage.
- 2. Damaged parts caused by icing are repaired for a fee even during the warranty period.
- 3. After the construction is completed or when it is not used for a long time, prepare to prevent sudden drop of temperature and prevent the product from icing.
- 4. Because of the risk of icing, please ensure that the ambient temperature of the product is always above 0°C.

Maintenance

To maintain a beautiful appearance of the product, the user is requested to conduct maintenance and care in the following method.


- 1. Wipe with a piece of soft cloth frequently and use a piece of soft cloth dipped in water to wipe from time to time.
- 2. When dirt exists obviously, please use water to wash sufficiently after wiping with a neutral detergent.

Installation completion figure

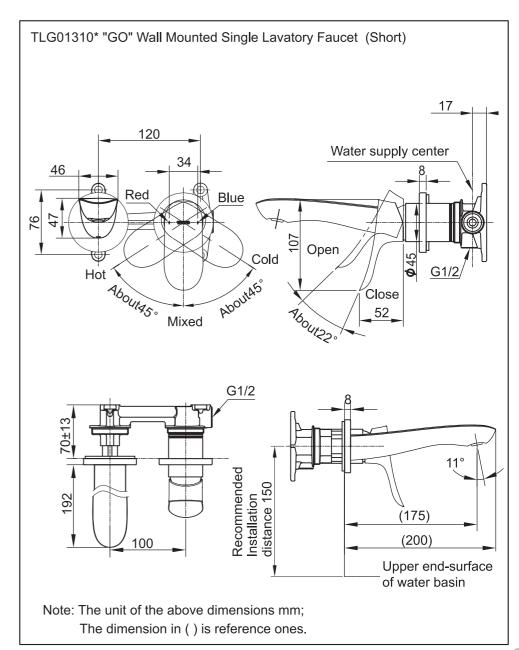

Faucet installion

Tools to be prepared before installation

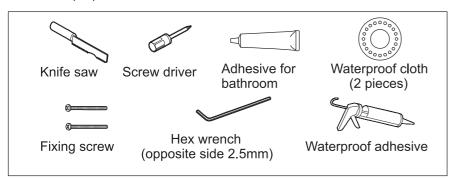


Confirmation before installation


- Make sure that the water supply pipe has been shut off and the waterway has been cleaned.
- Read the installation manual carefully and follow the installation instruction.

I.Installation the main body

- 1. Connect the main body of faucet to a matching pipe. Groove the wall in accordance with the illustrated dimension. Otherwise, it might cause a problem when mounting the faucet.
- ※ Essential: Calibrate the wall embedded body with a gradienter to keep its horizontal direction and vertical direction at optimum.

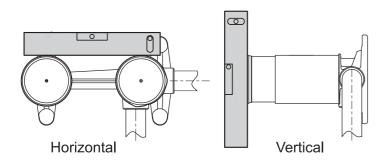


Faucet installion

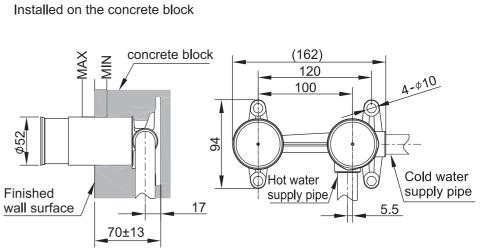

As shown in the figure, use cement or other padding to mount the product in the wall.

Installed to the intergration of the bathroom, ect, clapboard and layer board:

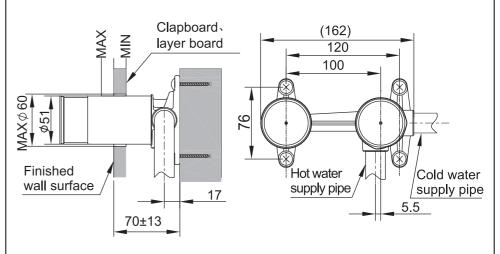


As shown in the figure, use screws to fix the product on the wall. **Please according to the need to further prepare suitable screw.

Faucet installion

Attentions

- •When mounting the wall embedded body, do not remove the resin sheath or the inner sheath.
- Pay attention to the embedding depth of the wall embedded body to ensure that the finished wall surface is between the marks MIN and MAX on the protective sheath.
- Connect the inlet pipe to the wall embedded body. Make sure that each connection does not leak and then apply cement padding.
- 2. Get the waterproof cloth through the resin sheath and use the adhesive for bathroom to paste it onto the cement wall surface.
- 3. After the adhesive is completely dried, fix the tile.(Ceramic tile opening size below) . In the case of the resin sheath and the wall of the gap evenly coated with waterproof adhesive, and adhesive surface can not be convex the wall.

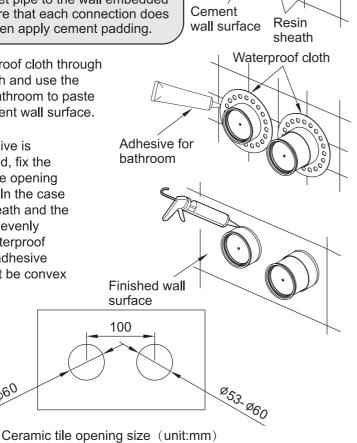

Inner sheath


Faucet installion

II. Installations of spout part and handle part


1. Cut off the resin protective sheath with a knife saw and ensure that the interval between the raised edge of the resin sheath and the wall surface is within 2mm.(The edge shall not sink in the wall surface)



•Do not hurt the inner sheath when cutting to avoid damaging the internal cartridge sheath.

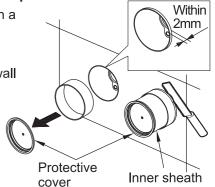


- 2. Installation of handle part:
 - a. Pull out the inner sheath (Note: The inner sheath does not work anymore after mounting is finished).
 - b. Cap the cartridge sheath with the decoration cover near the wall surface (Note: Apply a small amount of soap water on the O-ring inside the decoration cover for Jubrication in order to facilitate mounting)
 - c. Mount the handle onto the cartridge and use the screw to fix it and mount the indication cover at the position of the screw hole.

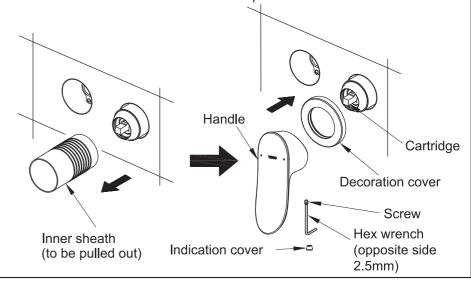

Faucet installion

3. Installation of spout part

a. Insert the fixing connecter into the wall embedded body and use 2 screws to fix it onto the wall.

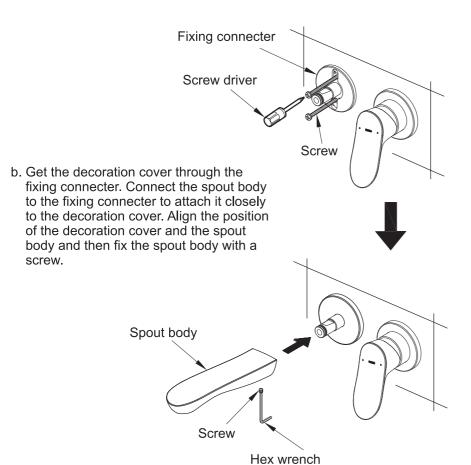

(opposite side 2.5mm)

TOTO Asia Oceania Pte. Ltd.

telephone:65-6744-6955

FAX: 65-6841-0819

Address: 10 Eunos Road 8 #12-07 Singapore Post Centre

Singapore 408600

Website:asia.toto.com

TOTO KOREA LTD.

전화번호: (02)-3141-8236 FAX 번호: (02)-3141-8240

주소: 서울시 마포구 토정로 112(상수동, 로이코빌딩 3층)

홈페이지: http://www.totokr.co.kr